


How to Decommission an EauFlow RO water filter for an extended period of inactivity (1 week+). 30 minutes / Easy


Tick when
task complete

- 1 Turn off mains water coming into RO
- 2 Drain tank (by opening tap)
- 3 Close storage tank valve
EY404, Purity, EY505 models = twist blue valve, on top of storage tank, 90 degrees (so it is perpendicular to the tubing).
Clarity/EY189 = twist blue valve clockwise (blue valve can be found in top right corner at the back)
- 4 Turn off electricity
- 5 Remove all 5 cartridges and dispose of in general waste*
- 6 **Hard water system only:** remove large blue cartridge (EY30810)
Method: Pinch the quick-connection collar where tube connects onto cartridge, between your index and middle finger of one hand and pulling tube away with other.

*How to remove cartridges

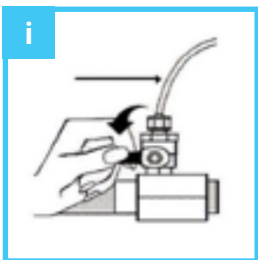

Turn off mains water

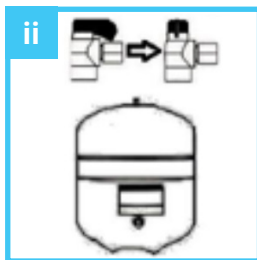


Close



Open the door



Pull up to take off cover

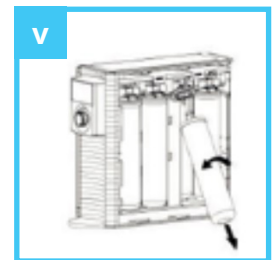

Remove used filter

PP 201-3 03/11/21. v2. Decommission

RO. **Carried out by (name):**

Date:

Please keep for your records