


Elbow connections and changing filters on Eau Flow 505 RO

This notice is ONLY for Eau Flow 505 (2019) models with 90° elbows connected, as per below:

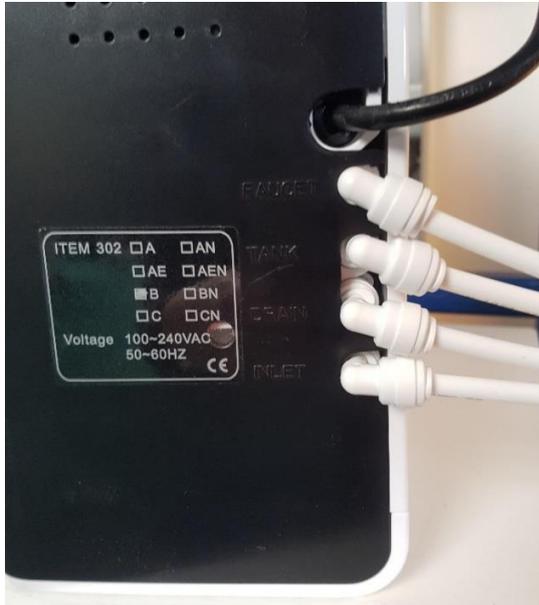

Carry on reading



Ignore this document & discard

The process takes around 10 minutes and can be carried out when changing the 5 cartridges on the annual service. It is only carried out ONCE and ensures you can change the 5 cartridges without needing to call out an engineer.

Some practices might struggle to open up the RO cabinet, when sliding back the black side panel:

- 1) TURN OFF all water supplies to the RO unit and on the valve on the storage tank
- 2) OPEN dispensing tap or valve to purge any existing water from the system
- 3) TURN OFF 13-amp switch on socket so no power is coming to RO unit.
- 4) HAVE some paper towelling available to mop up any water drips
- 5) **BEFORE removing ANY of the white plastic tubes, mark them (with a markerpen 'F', 'T', 'D' & 'I;') so you know EXACTLY where they need to be reinserted in the ports at the back of the RO: Faucet / Tank / Drain / Inlet**

- 6) Using a flat headed screwdriver, or similar tool, push onto collar on the quick-release on the RO with one hand and pull the white elbow out of the port with the other. The pressing of the screwdriver will release the 'quick-connect' mechanism, as indicated in the image 3 below.

Image 3:



- 7) Repeat for all 4 elbows
- 8) Now you can open RO unit as normal, by sliding back black panel and unclipping white panel and changing all 5 cartridges. Discard in black bag rubbish: non-hazardous items
- 9) Disconnect each elbow from plastic tubing and discard in black-bag rubbish



- 10) Now reinstall tubing into back of RO unit, as per your marks in step 5) above.
- 11) When returning RO unit to its location, DO NOT push it to the back of the cabinet, so it creases or bends the tube. Typically leave a 10-15 cm gap.
- 12) Monitor the RO system daily making sure there is no sign of water dripping / weeping.

For any further queries, please contact technical@cleancert.co.uk